


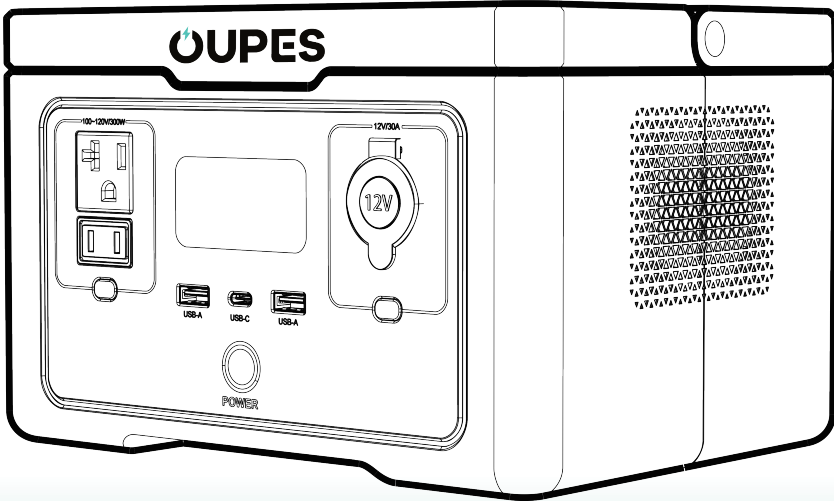

100~120V

# EXODUS 600

600W Portable Power Station

**User Manual**

# Contents


|                                        |       |
|----------------------------------------|-------|
| <b>Product List</b>                    | 03    |
| <b>Product Description</b>             | 04-07 |
| Parameter Specifications               | 04-05 |
| Function Description                   | 06    |
| LCD Screen Description                 | 07    |
| <b>Instructions for Use</b>            | 08-09 |
| <b>Recharge Methods</b>                | 10-11 |
| AC Charging                            | 10    |
| Solar Charging                         | 11    |
| <b>Other Functions</b>                 | 11-13 |
| EPS                                    | 11-12 |
| AC Input Overload Protection           | 13    |
| <b>FAQ</b>                             | 14-15 |
| <b>Fault Code and Trouble Shooting</b> | 16-17 |
| <b>Storage and Maintenance</b>         | 18    |

# Disclaimer


Read this user manual carefully before using the product to ensure that you completely understand the product and can correctly use it. After reading this user manual, keep it properly for future reference. Improper use of this product may cause serious injury to yourself or others, or cause product damage and property loss. Once you use this product, it is deemed that you understand, approve and accept all the terms and content in this document. The Company is not liable for any loss caused by the user's failure to use this product in compliance with this User Manual. In compliance with laws and regulations, the Company reserves the right to final interpretation of this document and all documents related to this product. This document is subject to changes updates, revisions, or termination without prior notice. Please visit the official website to obtain the latest product information.

- The Company is not responsible for any damage caused by force majeure (e.g. fire, typhoon, flood, earthquake or negligence, abuse or use under other abnormal circumstances by the customer).
- No compensation for losses caused by the use of non-standard connectors.
- The Company is not responsible for any damage caused by not following the instructions in the operating instructions.


# What's in the Box

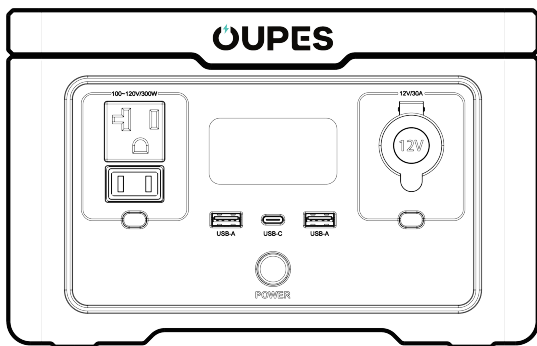

Power Station

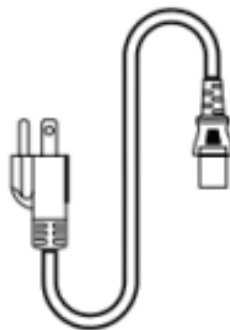

AC Charging Cable

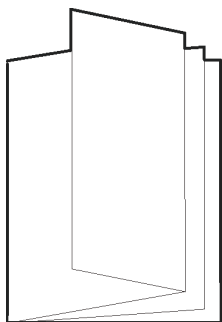

User Manual & Warranty



Fuse 10A

# Product Description

## ⚡ Parameter Specifications


| Output Technical Parameters |                                  |            |
|-----------------------------|----------------------------------|------------|
| AC Output                   | Rated Voltage                    | 100~120Vac |
|                             | Rated Power                      | 600W       |
|                             | Peak Power                       | 1200W      |
|                             | Frequency                        | 60Hz       |
| DC 12V & Car Lighter Output | Rated Voltage                    | 12.8V      |
|                             | Rated Current                    | 10A        |
| USB-A Output                | 5V/3A; 9V/2A; 12V/1.5A [18W Max] |            |
| USB-C Output                | 5V/3A; 9V/2A; 12V/1.5A [18W Max] |            |

| Input           |                                    |
|-----------------|------------------------------------|
| AC Charge Input | 90-140Va.c 2.5A 50/60Hz 300W Max   |
| PV Input        | 15~35Vd.c MPPT:15-35V/12A 240W Max |

| Battery        |          |
|----------------|----------|
| Rated Capacity | 256Wh    |
| Rated Voltage  | 12.8 Vdc |
| Battery Type   | LiFePO4  |

# Product Description

## ⚡ Function Description

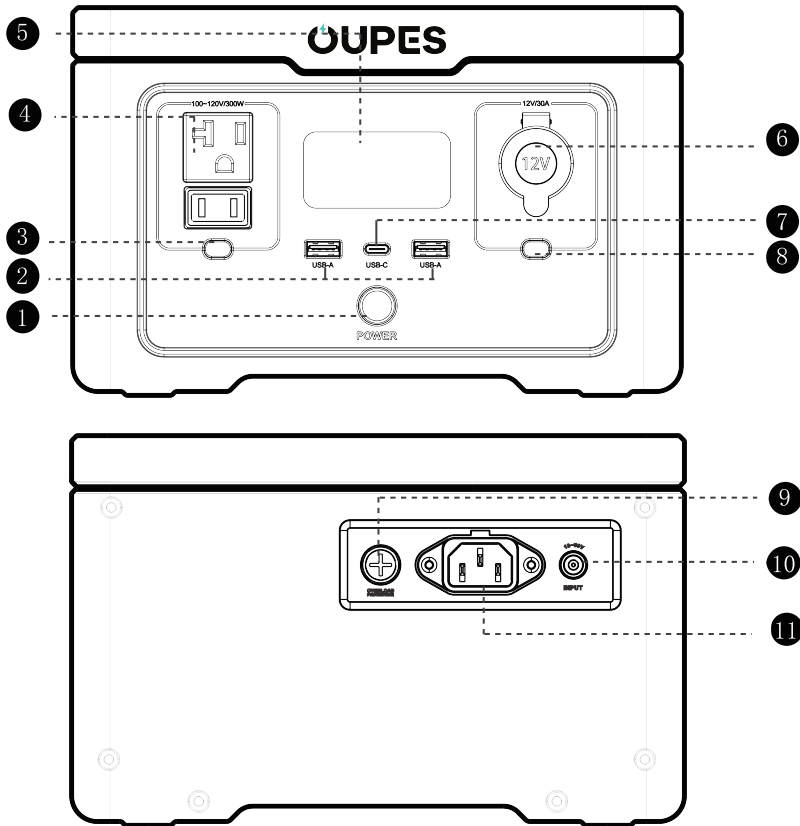

1. Main Power On/ Off Switch

2.USB-A Output

3. AC Output Power On/ Off Switch

4. AC Output Port

5. LCD Screen

6. Car Charger Output Port

7.USB-C Output

8. DC Output Power On/off Switch


9. AC Input Overcurrent Protection

10.PV Input

11. AC Input

# Product Description

## ⚡ LCD Screen Description

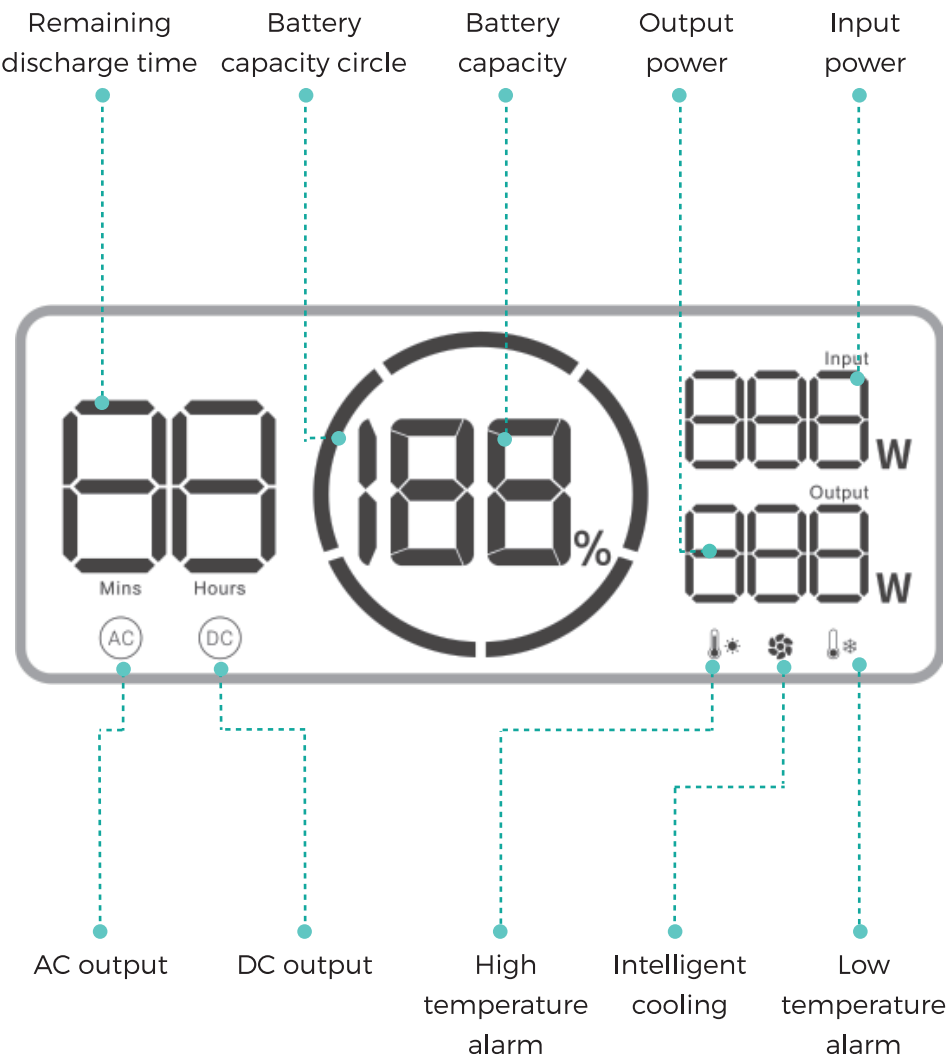


# Instructions for use

LCD battery capacity circle indicates battery level. The capacity circle is divided into five sections, accounting for approximately 20%~40%~60%~80%~100% of the capacity. When in use, the LCD display automatically wakes up. When discharging, the capacity segment disappears from the display, indicating remaining capacity. When charging, the battery capacity circle flashes clockwise along the trajectory, which indicates that the device is currently charging. The number on the right side of the energy circle now displays the real-time input power. After full charging, all capacity segments will be illuminated and remain stable. After charging is complete, unplug the charger.

Press and hold for 3 seconds to turn on or off the main power. When turning on the power, press and hold the power button. All icons will light up to check whether the screen is normal. When the screen shows ON, release your hand to indicate that the power is on. A circle of LED lights around the button will light up the breathing light. Press and hold when turning off the product. Release your hand when the power button screen shows OFF, and the LCD display turns off.

When the main power button is turned on, lightly press the switch button of each functional area, and the corresponding function icons on the LCD screen will light up at the same time. At this time, the functions in this area can be used normally; tap the corresponding functional area button again, and the corresponding LCD screen icons will turn off. This area function stops working.

# Instructions for use

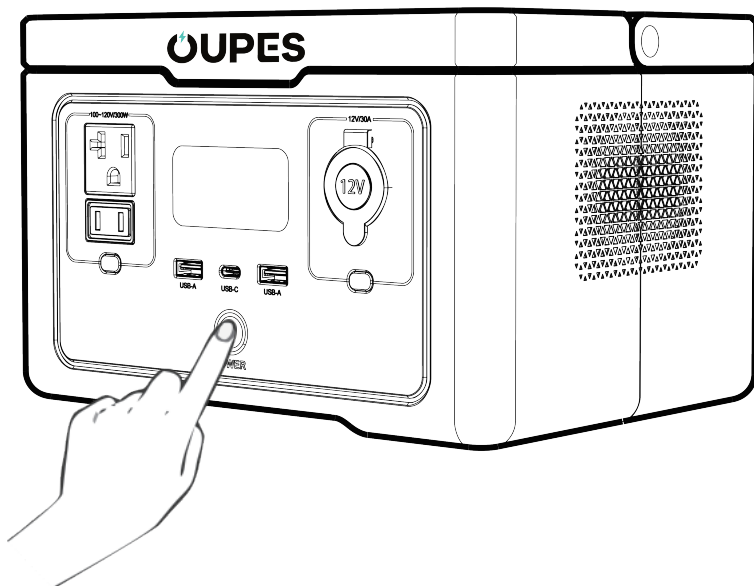


## Notice:

1. After the product is turned on, short press the main power button. The LCD screen will turn off but the product will not shut down.
2. If the product is not operated within 5 minutes, the product will enter sleep state and the LCD screen will automatically turn off. When the product is operated, the LCD screen automatically lights up.
3. When not loaded, the default standby time of this product is 4 hours. This product will automatically shut down after 4 hours.

# Recharge Methods

## ⚡ AC Charging


Use the standard AC charging cable to charge the device and connect it as shown in the figure. At this time, the input power reading appears on the screen, and the device starts charging. It can support up to 300W fast charging and can fully charge the device in about 0.8 hours.

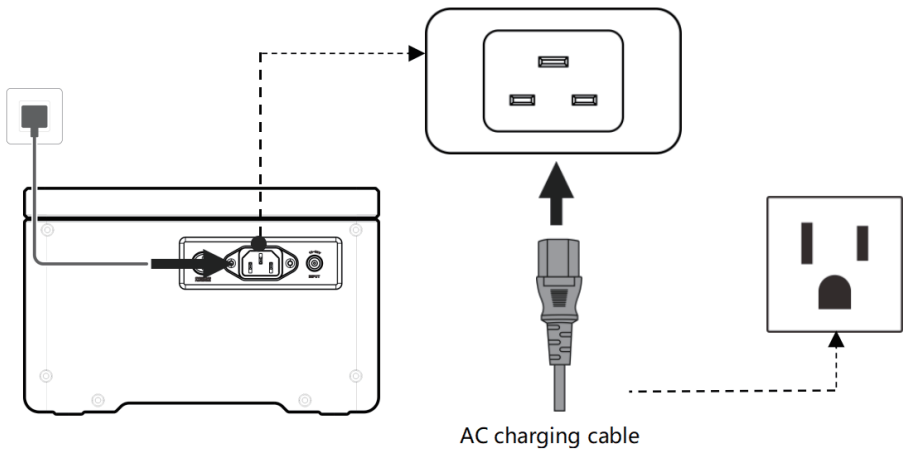

# Recharge Methods

## ⚡ Solar Charging

Insert and connect the optional 100W or 240W solar panel charging output port to the 7909 charging port on the product. At this time, the energy bar on the screen starts to rotate, the input power is displayed normally, and the product enters the charging state.

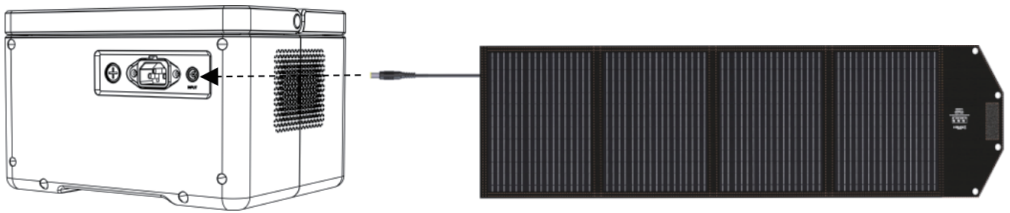

### Notice:

1. The solar panel should be kept at a perpendicular angle to the sun's rays as much as possible to achieve the highest solar energy conversion efficiency.
2. Before connecting the solar panel, please confirm that the output open circuit voltage specification of the solar panel is within 35V to avoid damage to the product.


## ⚡ EPS Function

When powered on, this device supports the EPS (emergency power backup) function. When the AC charging cable is connected to the power grid and the AC input port of this product, the electrical appliance can use the AC output port of this product to -

# Other Functions

## ⚡ EPS Function

work (at this time the AC power comes from the power grid instead of battery), when the power grid suddenly cuts off, this product can automatically switch to the battery power supply mode of this product within 20ms.

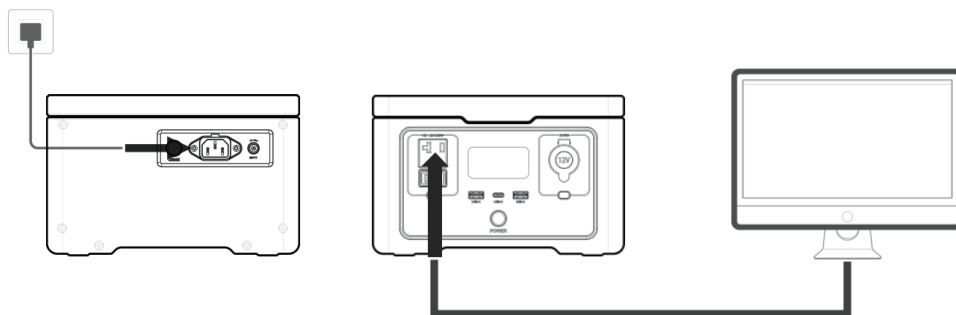


Notice:

This function is a non-professional UPS function and does not support 0ms switching. Please do not connect it to equipment that requires uninterrupted power supply (such as data servers and workstations), or please test it multiple times to confirm whether it is compatible before using it. It is recommended to use only one device during use. The operating power of the device should not exceed 600W (input + output). When the load and charging reach 600W, there will be a delay of one minute to report overload and shut down the output. If it is greater than 600W, the output will be shut down after a delay of 1 second. Do not use multiple devices at the same time to avoid triggering the overload protection of this product. If the device fails to operate normally or data is lost due to failure to follow instructions, our company will not bear the corresponding responsibility.

# Other Functions

## ⚡ AC Input Overload Protection

When the AC input current continues to be abnormally greater than 10A, the AC input overload protector fuse blows to protect the device. After confirming that there is no fault with this product, replace the fuse in the AC input overload protector (see accessory bag) to resume charging.

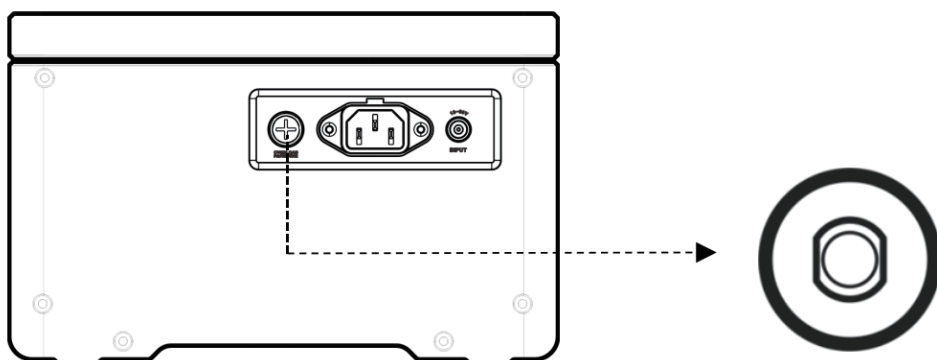

## **1. What type of battery does the product use?**

This product uses high-quality lithium iron phosphate batteries.

## **2. What equipment can be connected to the AC output port of the product?**

The AC output port of this product has a rated power of 600W and a peak power of 1200W. It can power most household appliances. However, it is recommended that you confirm the power of the appliance before use and ensure that the sum of the power of all load devices is less than the rated power.

## **3. How to know how long the product can provide power?**

The LCD screen of this product will display the battery life, and devices with stable power consumption can be estimated based on this time.

## **4. How to tell if the product is charging?**

When charging, the LCD screen will display the remaining charging time, and the power indicator circle outside the battery power percentage will begin to rotate in a circular motion, and the input power will be displayed.

## **5. How to clean this product?**

Please use a dry, soft, clean cloth or paper towel to wipe this product.

## **6. How to store the product?**

When storing, please turn off this product first and then store it in a dry, ventilated place at room temperature. Do not place this product near water and fire sources. During long-term storage, it is recommended to charge and discharge the battery every three months to extend the service life of this product.

## **7. Can this product be brought on board a plane?**

Can't.

## **8. Is the actual output capacity of the product consistent with the capacity specified in the user manual?**

The capacity indicated in the user manual is the rated capacity of the battery pack of this product. Since this product has a certain efficiency loss during the charging and discharging process, the actual output capacity of the product is lower than the capacity specified in the user manual.

# Fault Code and Trouble Shooting

| Fault code | Fault information                                 | Status                                                                                                                                                                                                      | Remarks                                                                                                                                                  |
|------------|---------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| E00        | AC output short circuit protection                |  Flashing, no output                                                                                                       | Press the AC output power on/off button for recovery                                                                                                     |
| E01        | Output overload protection                        |  Flashing, no output                                                                                                       | The function icon indicates which path is overloaded. Overload protection requires manual recovery. The UPS function is overloaded at 600W for 1 second. |
| E02        | AC Battery low voltage protection                 | The corresponding function icon flashes and the corresponding port has no output.                                                                                                                           | Battery capacity below 20%, load $\leq 300W$ , restart the corresponding function button to restore the function and charge in time.                     |
| E03        | AC output over-voltage and low voltage protection |  Flashing, no output                                                                                                       | Need to manually press the AC switch to restore                                                                                                          |
| E04        | Abnormal AC input frequency                       |  Flashing, no output                                                                                                       | Automatically recovers after frequency returns to normal                                                                                                 |
| E05        | High and low bus voltage, over-current            |  Flashing, no output at all ports                                                                                         | Need to manually press the AC switch to restore                                                                                                          |
| E06        | Inverter over-temperature                         |  Flashing, no output at all ports<br> | Automatically resumes after temperature returns to normal                                                                                                |
| E07        | Inverter low temperature                          |  Flashing, no output at all ports<br> | Automatically resumes after temperature returns to normal                                                                                                |
| E08        | Cigarette lighter port overload                   |  Flashing, no output at all ports                                                                                        | Need to manually press the AC switch to restore                                                                                                          |

# Fault Code and Trouble Shooting

| Fault code | Fault information                                                            | Status                                                                                                                          | Remarks                                                                        |
|------------|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| E09        | System overload                                                              | The AC icon flashes, the AC function is turned off, DC output is normal, AC is greater than 600VA or AC+DC is greater than 600W | Need to manually press the AC power button to restore                          |
| E11        | Hardware bias                                                                | E11 code flashing, no output at all ports                                                                                       | Manually turn off the main power and then restart                              |
| E12        | Cigarette lighter port short circuit                                         |  Flashing, no output at all ports              | Need to manually press the DC power button to restore                          |
|            | charging over-temperature protection and charging low-temperature protection | No input, white energy circle rotates normally                                                                                  | Automatically resumes after temperature returns to normal                      |
|            | PV input over-voltage                                                        | No input                                                                                                                        | PV charging voltage<35V, automatically resumes after voltage returns to normal |

# Maintenance

1. Please store the product away from water sources, heat sources, and metal objects.
2. In order to extend the service life of the battery, it is recommended to use or store this product in an environment of 20°C to 30°C.
3. If long-term storage is required, please charge and discharge this product once every 3 months (first discharge to 0%, then fully charge, then discharge to 60% for long-term storage); products that have not been charged or discharged for more than 6 months warranty will not be provided.
4. For safety reasons, do not store this product in an environment above 45°C or below -10°C for a long time.
5. If the product is seriously low on power and idle for too long, the product will enter deep sleep mode, and the product must be charged before use again.